


# Administration Pane

The Administration pane is reached by clicking on the gears icon on the toolbar. This pane is divided into three tabs.

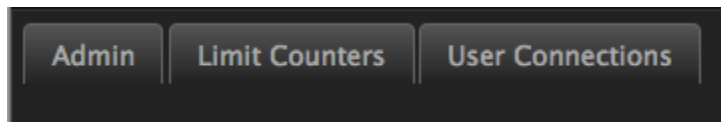

Admin Configuration controls for tractor engine. Limit Counters Details about current limit activity. User Connections Provides information on connected users.